

INSTALLATION INSTRUCTIONS

---

# BAY MASTER M1 SWIM UNDER CANTILEVER



TO PROTECT YOUR PRODUCT, PLEASE READ THE OPERATING INSTRUCTIONS BEFORE OPENING THE PARASOL.

# BAY MASTER M1 SWIM UNDER CANTILEVER

## Step 1

Remove all packaging from parasol, including inside of the parasol.

## Step 2

Pull pin to unlock cam lock handle. Make sure cam lock handle is open (per drawing #2).

## Step 3





Insert cover to mast. Place parasol on security stem.

## Step 4

Push cam lock handle (per drawing #4) until engaged in the proper gear slot with the cam lock handle in the downward position.

## To rotate parasol:

Pull pin to unlock cam lock handle, pull up and turn parasol to desired location. Lock cam lock handle down.

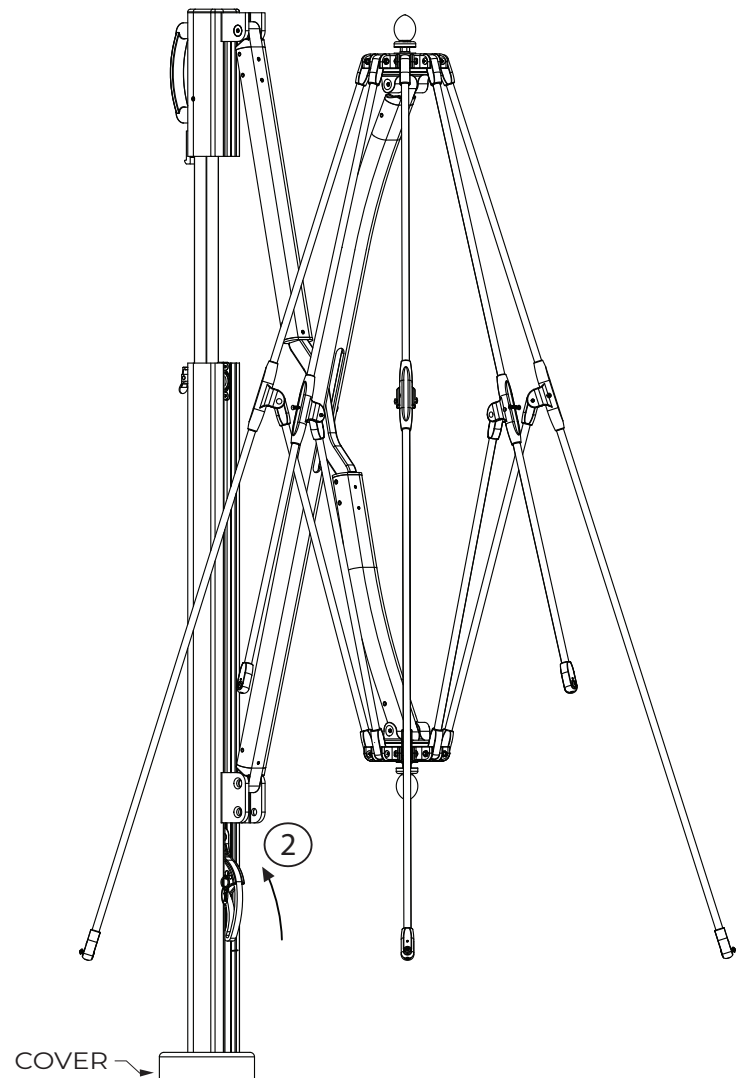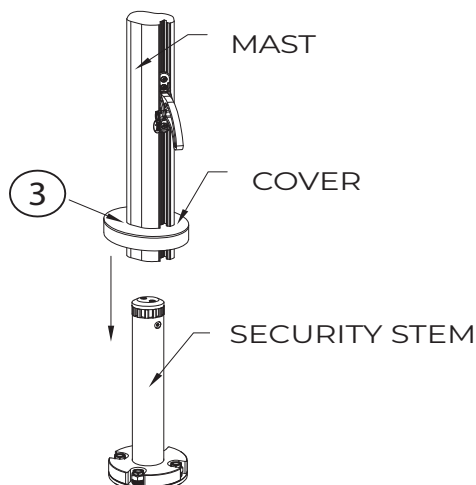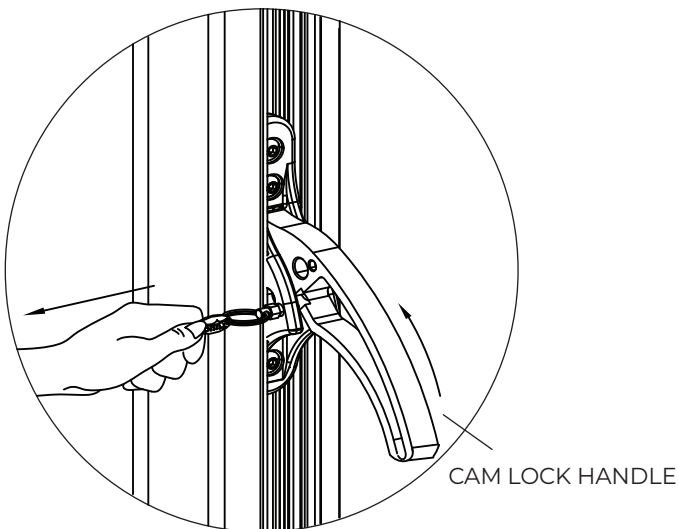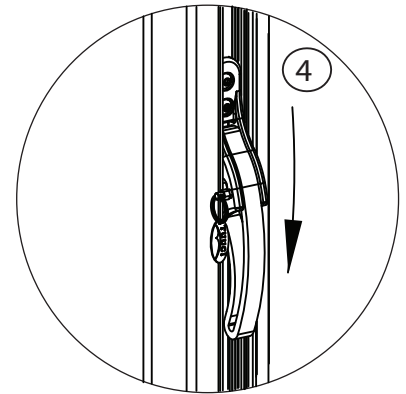


# BAY MASTER M1 SWIM UNDER CANTILEVER

## Step 5

Gently separate EACH RIB INDIVIDUALLY from the center hub, approximately 4-6"/10-15CM. If rib does not move easily, DO NOT force. Inspect product for additional packaging.

## Step 6

Pull mast handle down until the locking bracket are fully engaged (per drawing #6).

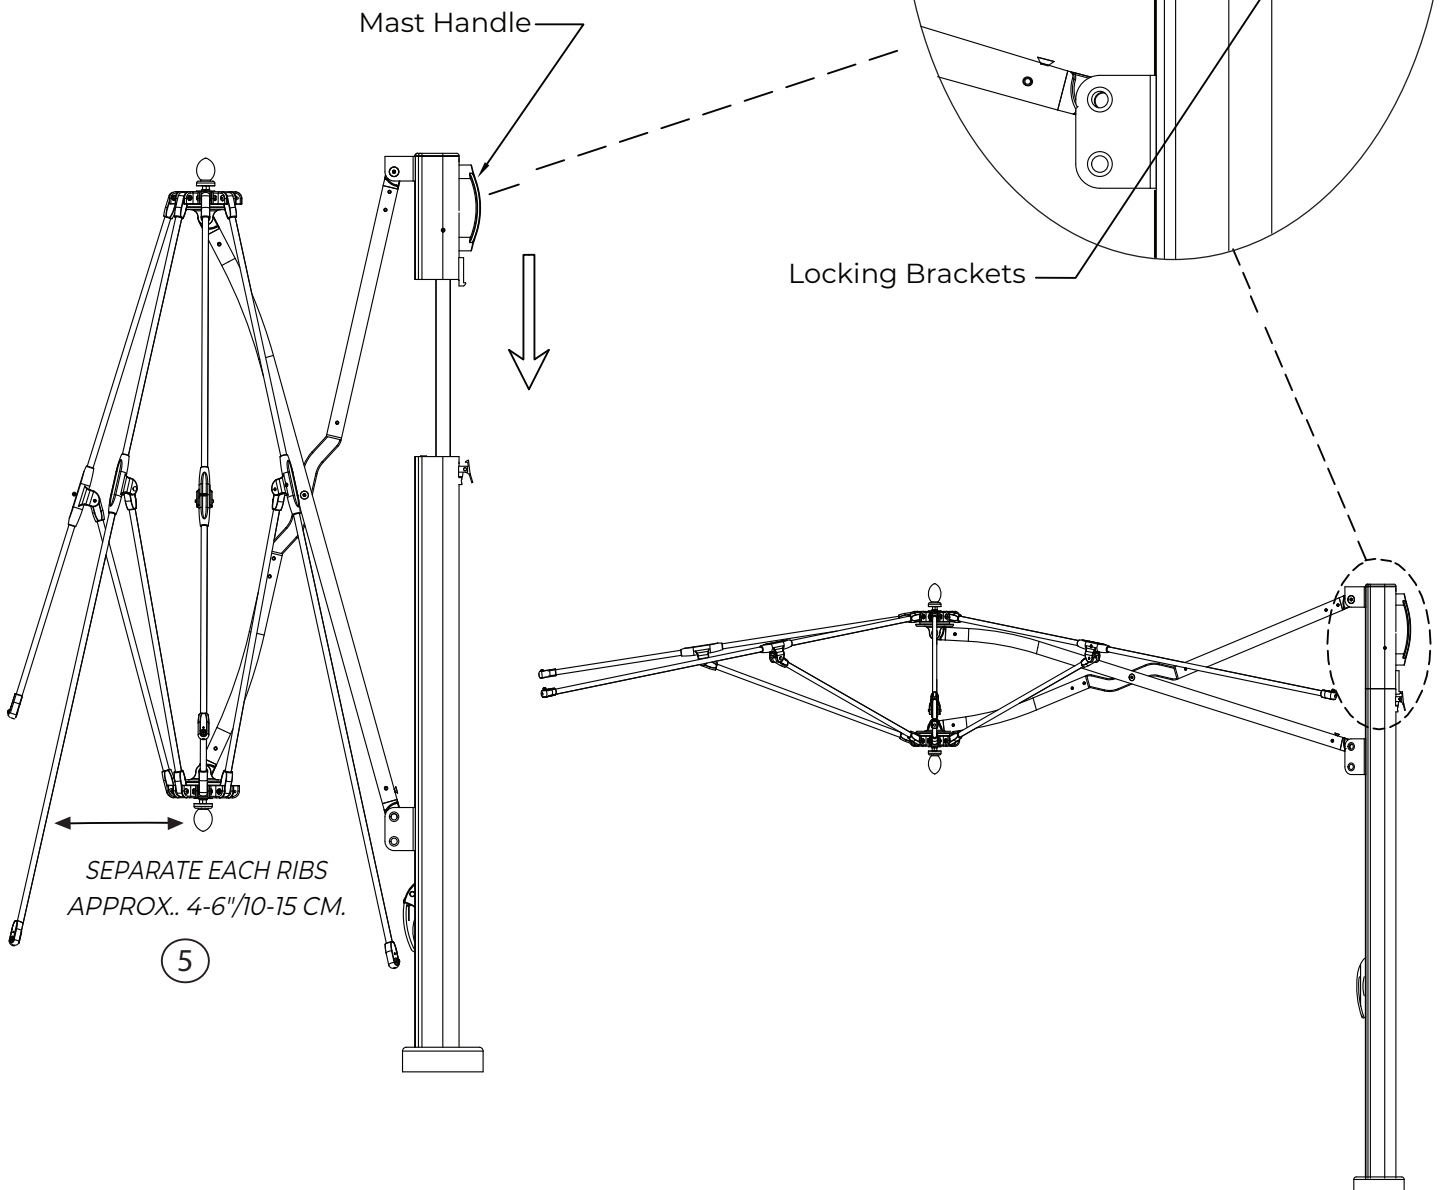

# BAY MASTER M1 SWIM UNDER CANTILEVER

## Step 7

To close the canopy, disengage the locking bracket

Note: Close parasol during wind conditions that exceed manufacturer's specifications.

## Step 8

Gently gather all canopy ribs and push the mast handle up, and tie back for safety.

