


ASSEMBLY INSTRUCTIONS




ALUMINUM CONCRETE FILLED (ACF)
BASE WITH SECURITY STEM.
FOR MAX CENTER POST PRODUCTS

- 1 Unscrew 4 screws (1/2"-13) from center of ACF BASE.
- 2 Align 4 holes in SECURITY STEM to the ACF BASE. Then tighten securely all 4 screws (1/2"-13) with 3/4" wrench. Retighten periodically.
- 3 The leveling nuts will be used to adjust the pitch of the parasol canopy. The security stem may not be exactly 90° to create a level canopy. Adjustments should be made with the canopy as a reference point, not the security stem. Once the canopy is level, securely tighten all 4 screws (1/2"-13) with 3/4" wrench.

ALUMA-CRETE WITH LIFT HANDLES

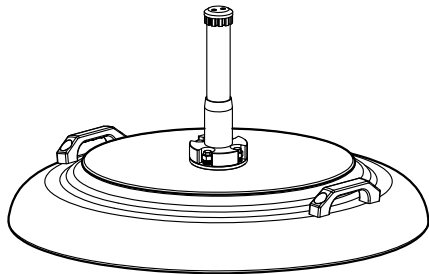

WEIGHT	DIAMETER
200 lbs / 92 kgs	30" / 76 Cm
250 lbs / 133 kgs	33" / 84 Cm

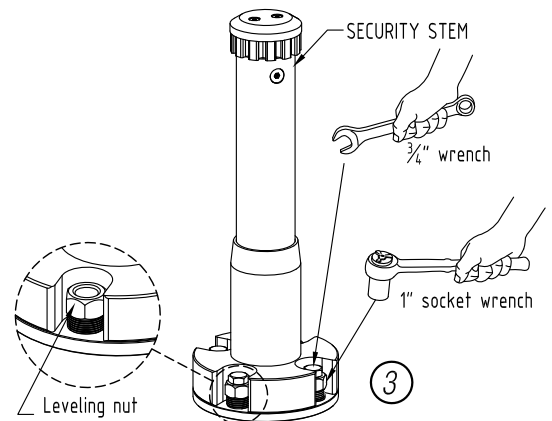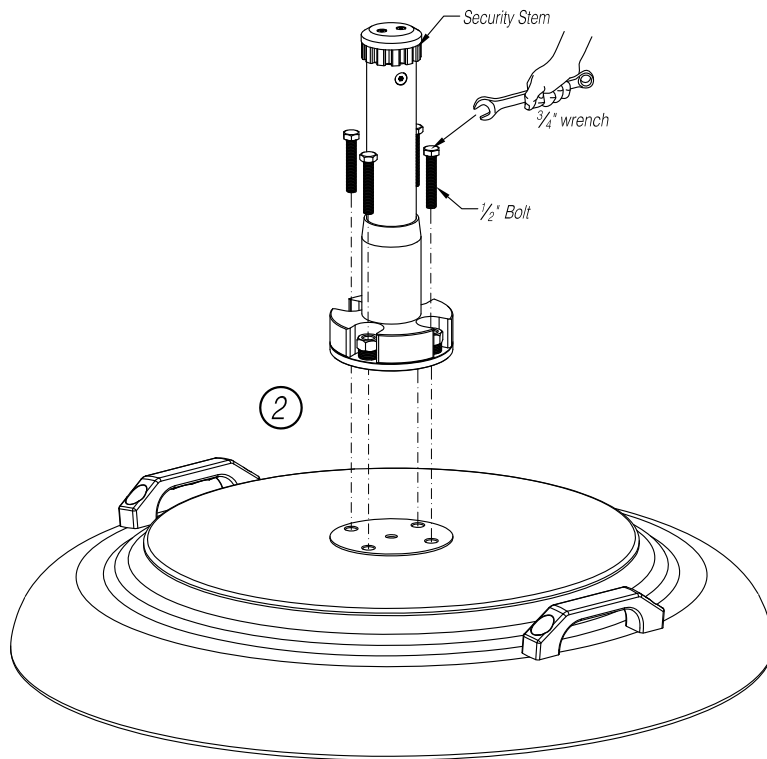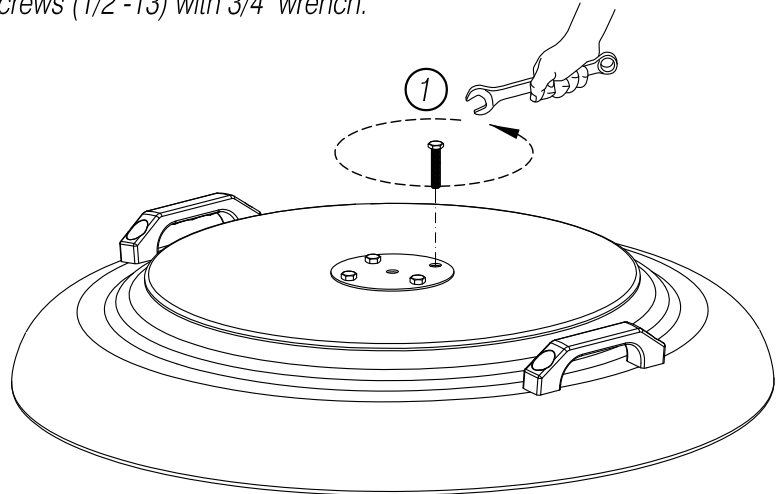

global headquarters

2900 NW 35th Street
Miami, FL 33142 USA
Version date: 04/01/2013 - REV: C

t 305.634.5116
f 305.634.5119

info@tuuci.com
www.tuuci.com

