

BAY MASTER M1 CLASSIC CANTILEVER



APPLICABLE TO BAY MASTER M1 CANTILEVER SHAPES:
SQUARE, OCTAGON & RECTANGLE

TO PROTECT YOUR PRODUCT, PLEASE READ THE OPERATING INSTRUCTIONS BEFORE OPENING THE PARASOL.

BAY MASTER M1 CLASSIC CANTILEVER

Step 1

To protect your product, please read the operating instructions before opening the parasol.

Step 2

Pull pin to unlock cam lock handle. Make sure cam lock handle is open per drawing shown.

Step 3




Insert cover to mast. Place parasol on security stem.

Step 4

Push cam lock handle (per drawing shown) until engaged in the proper gear slot with the cam lock handle in the downward position.

To rotate parasol:

Pull pin to unlock cam lock handle, pull up and turn parasol to desired location. Lock cam lock handle down.

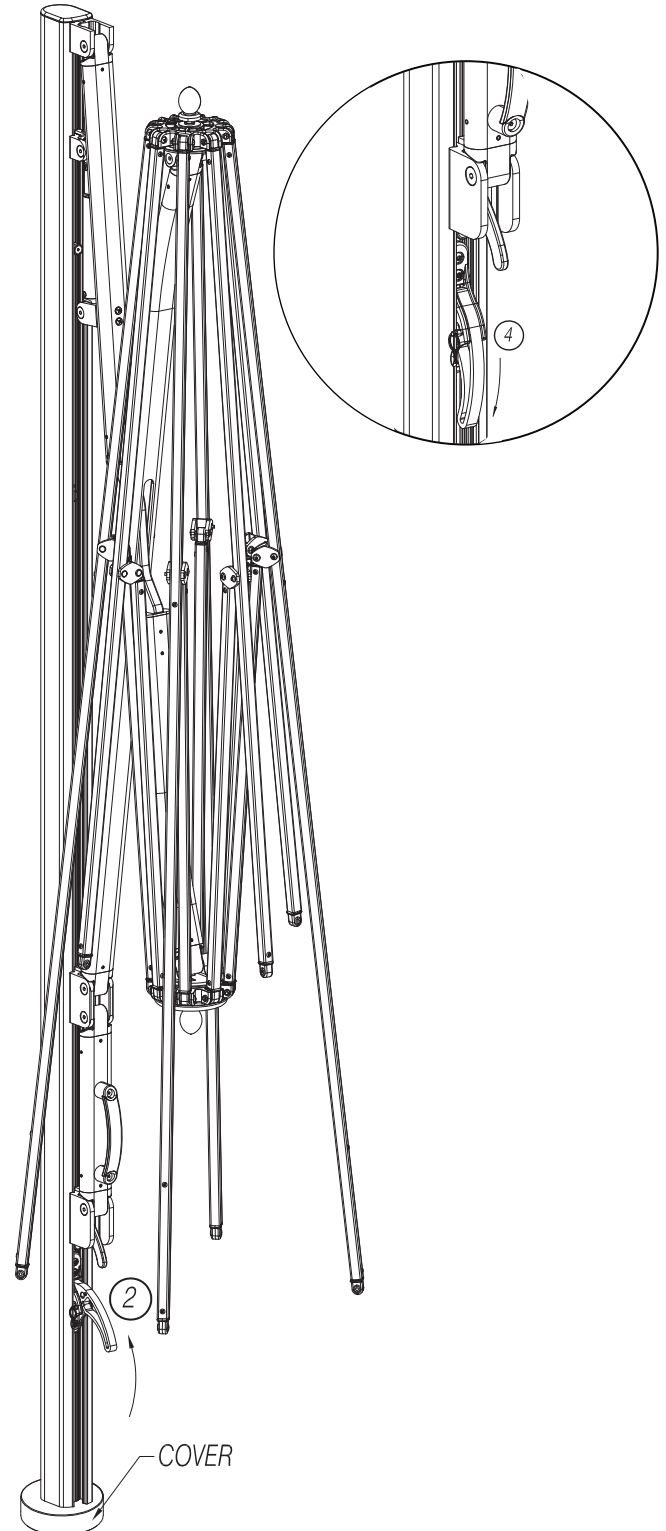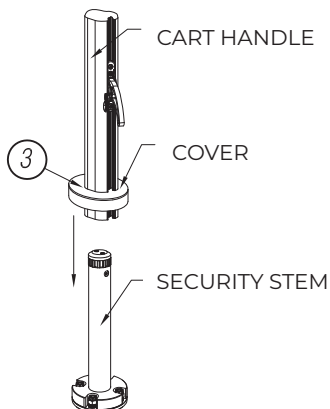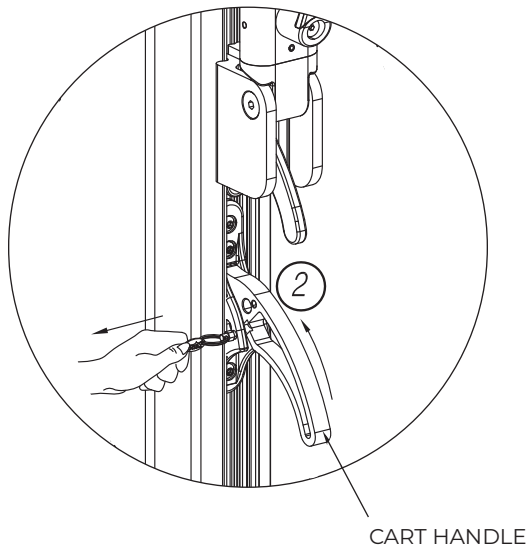



BAY MASTER M1 CLASSIC CANTILEVER

Step 5

Gently separate each individual rib from the center hub, approximately 24-36"/60-90CM. If rib does not move easily, do not force. Inspect product for additional packaging.

Step 6

Push up cart handle to stopper until the car is locked as per drawing shown.

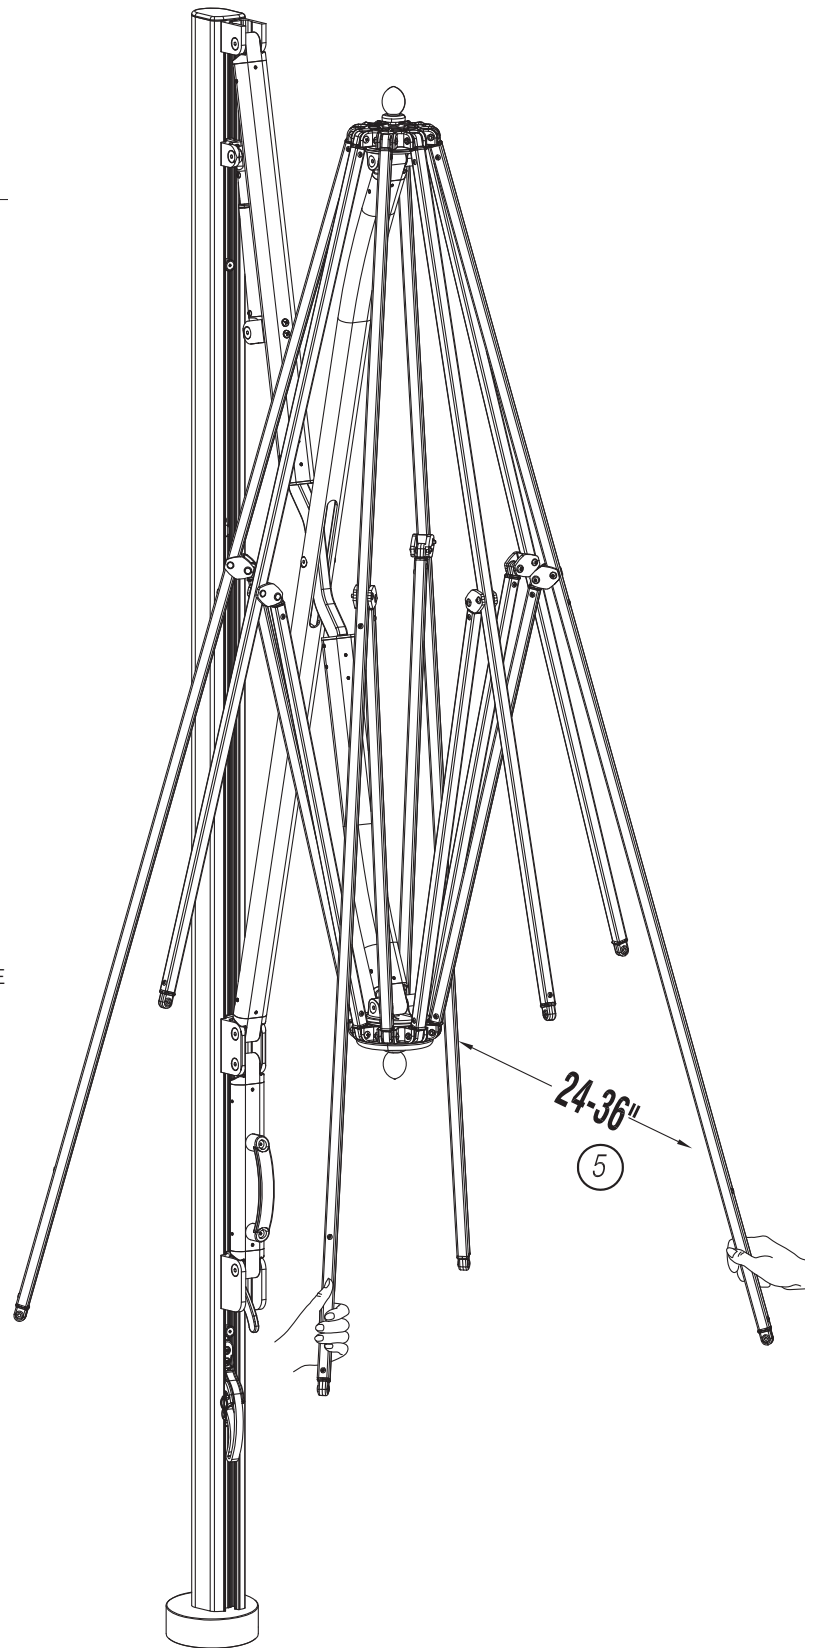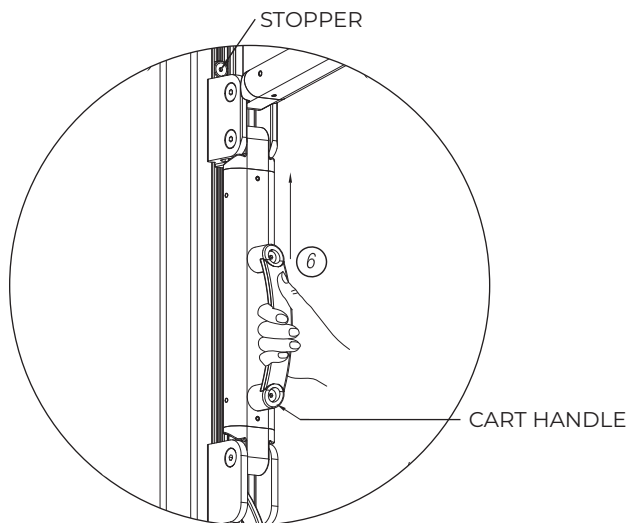

BAY MASTER M1 CLASSIC CANTILEVER

Step 7

Hold cart handle by hand. Then, push down cart lock and slide cart handle down to close parasol.

Note: Close parasol during wind conditions that exceed manufacturer's specifications.

Step 8

Close parasol with tie back when not in use.

