


HALF ALUMA-CRETE CUBE ANCHOR

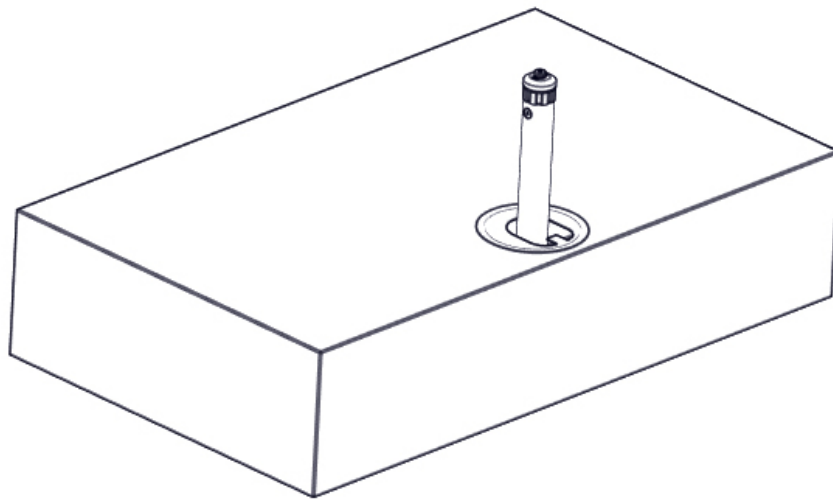

To protect your product, please read the operating instructions before assembling.

Step 1

Attach leveling feet to the bottom of the steel frame (included with hardware)

Step 2

Position the frame where you would like the parasol to be mounted.

Note: Once you have installed all of the pavers, the frame cannot be moved.

Step 3

Check to ensure that the stem is level by using the leveling bubble on the top of the security stem and adjusting the leveling bolts as necessary. Once level, tighten all 4 mounting bolts security with a $\frac{3}{4}$ " wrench.

Step 4

Install concrete pavers into the steel frame.

Step 5

Slide half above-ground cover over pavers and steel frame, then place the cap ring.

