

INSTALLATION INSTRUCTIONS

OCEAN MASTER M1 SHADE POD



TO PROTECT YOUR PRODUCT, PLEASE READ THE OPERATING INSTRUCTIONS BEFORE OPENING THE PARASOL.


OCEAN MASTER M1 SHADE POD

STEP 1

REMOVE ALL PACKAGING FROM IN AND AROUND PARASOL. REMOVE THE PLASTIC COVER BAG AND THEN THE BUBBLE WRAP INSIDE CANOPY AND AROUND FRAME.


STEP 2

REMOVE SECURITY STEM FROM INSIDE PARASOL AND MOUNT TO YOUR ANCHOR. INSTRUCTIONS ARE INCLUDED WITH ANCHOR.

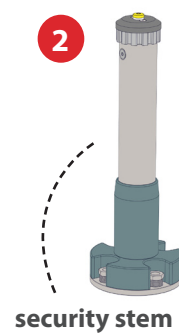

STEP 3


PULL PINS AND LIFT UP CAM LOCK HANDLES.

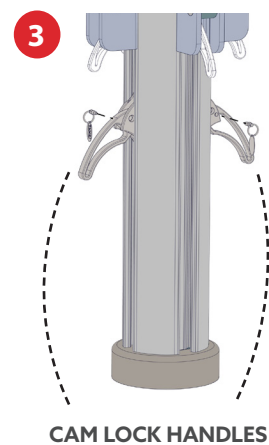

OCEAN MASTER M1 SHADE POD

STEP 4

MOUNT PARASOL ONTO SECURITY STEM AND PUSH DOWN CAM LOCK HANDLE UNTIL PIN ENGAGES.

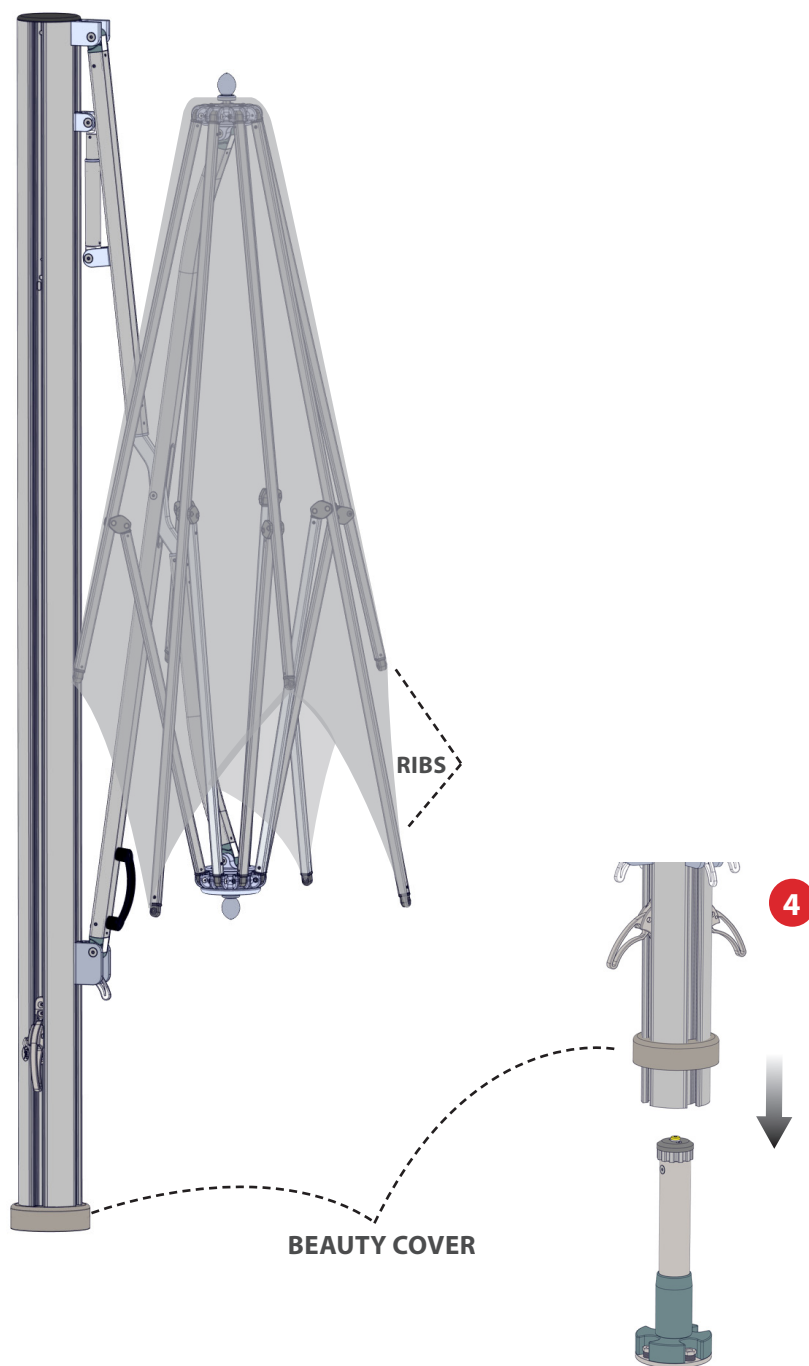

OCEAN MASTER M1 SHADE POD

STEP 5


INSTALL ADDITIONAL CANOPY FRAME BY USING SCREWS AND BUSHING PROVIDED.

STEP 6

GENTLY SEPARATE EACH INDIVIDUAL RIB FROM THE CENTER HUB APPROXIMATELY 10 INCHES. IF THE RIB DOES NOT MOVE EASILY, DO NOT FORCE. INSPECT THE PRODUCT FOR ADDITIONAL PACKAGING.

STEP 7

TO OPEN, PUSH ARM HANDLE UP UNTIL IT SNAPS INTO THE LOCKING POSITION.

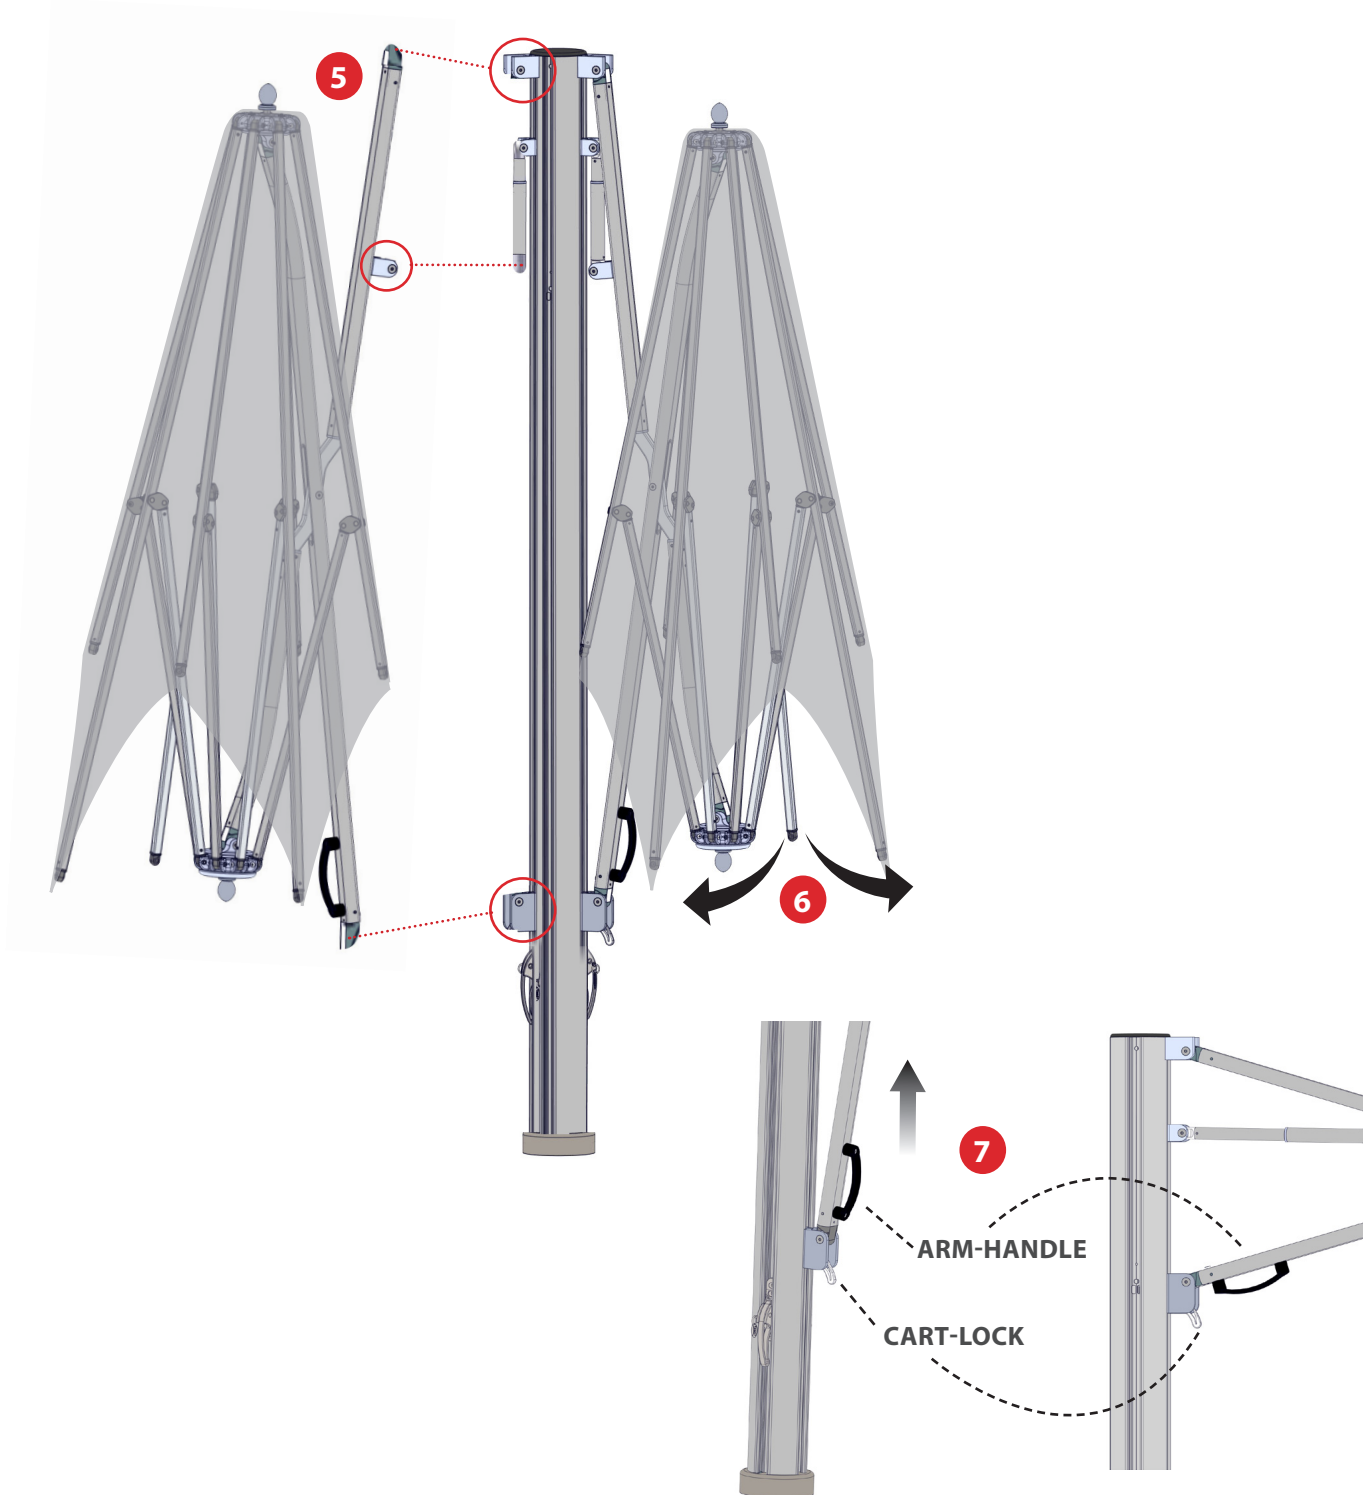

OCEAN MASTER M1 SHADE POD

STEP 8

TO CLOSE PARASOL, UNLOCK THE LEVER BY PUSHING CART UPWARDS AND PUSHING CART LOCK LEVER IN. THEN, SLIDE DOWN THE CART BY PULLING DOWN THE ARM HANDLE.

STEP 9

CLOSE PARASOL WITH TIE BACK WHEN NOT IN USE.

