



SHADE SCULPTURE STINGRAY



TO PROTECT YOUR PRODUCT, PLEASE READ THE OPERATING INSTRUCTIONS.

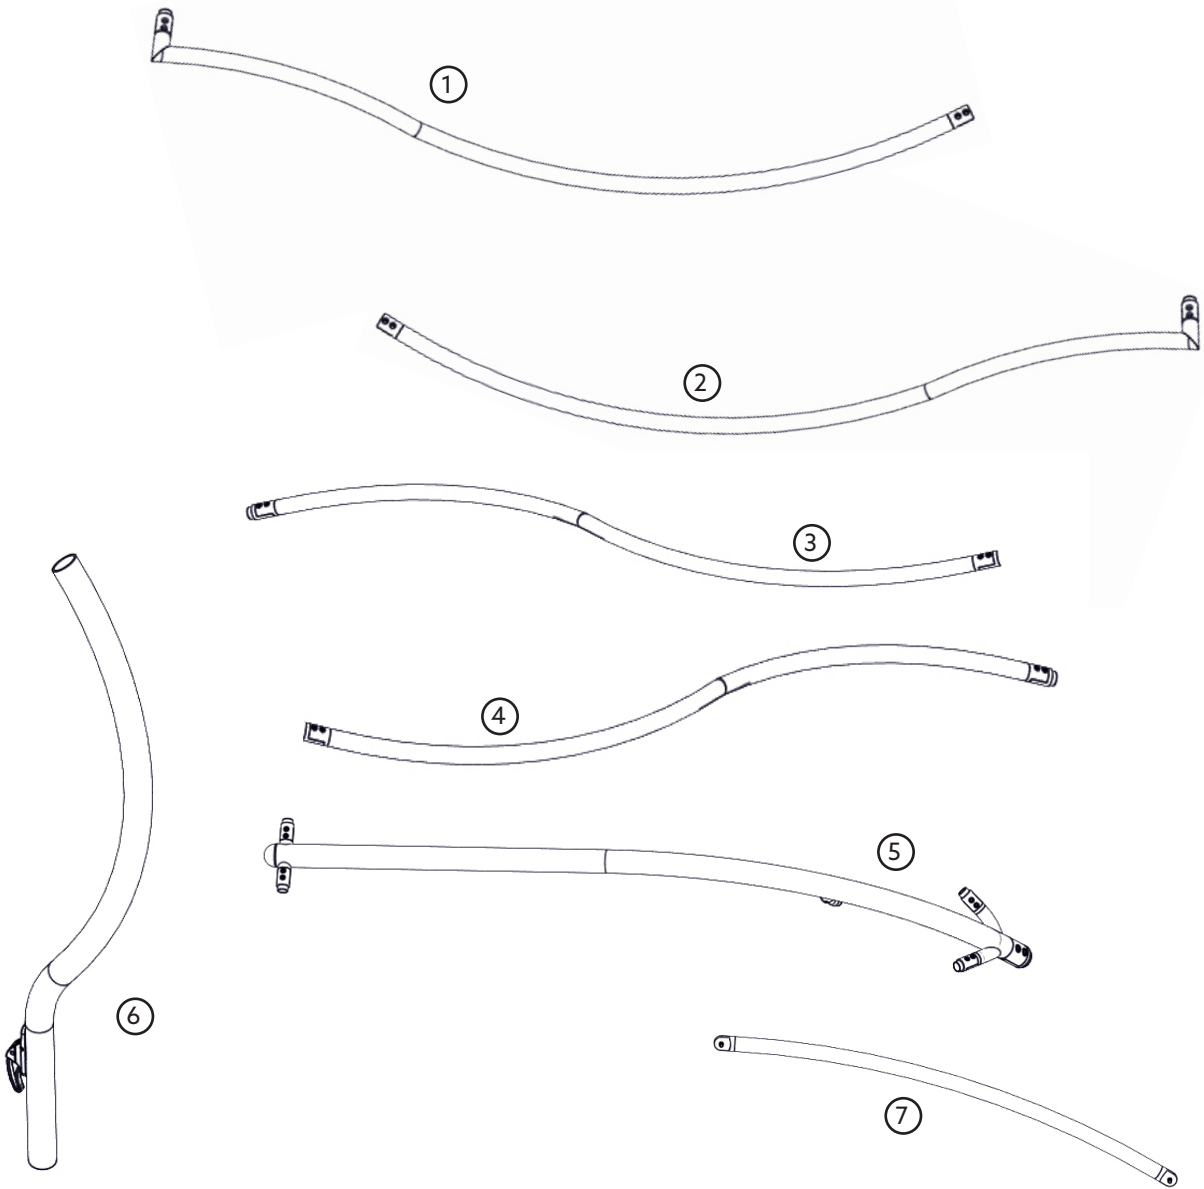


PARTS LIST		
ITEM	DESCRIPTION	QTY
1	LEFT - FRONT CROSSBAR	1
2	RIGHT - FRONT CROSSBAR	1
3	LEFT - BACK CROSSBAR	1
4	RIGHT - BACK CROSSBAR	1
5	UPPER MAST	1
6	LOWER MAST	1
7	CORNER SUPPORT	1
8	CANOPY	1

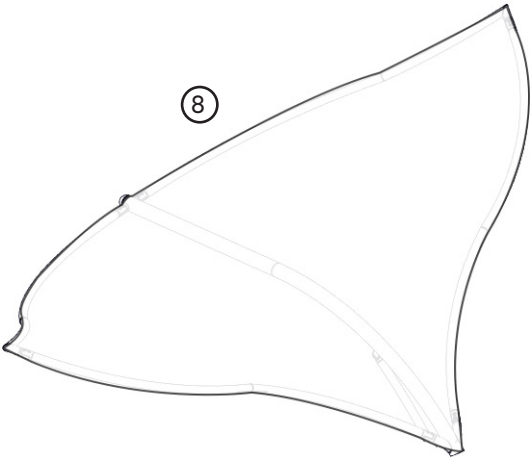

STEP 1


CONNECT THE CROSSBARS, MASTS, AND CORNER SUPPORT AT EACH POINT PER ILLUSTRATIONS.

SCREWS, 5/16-18 X 1IN SOCKET HEAD SCREW, SS

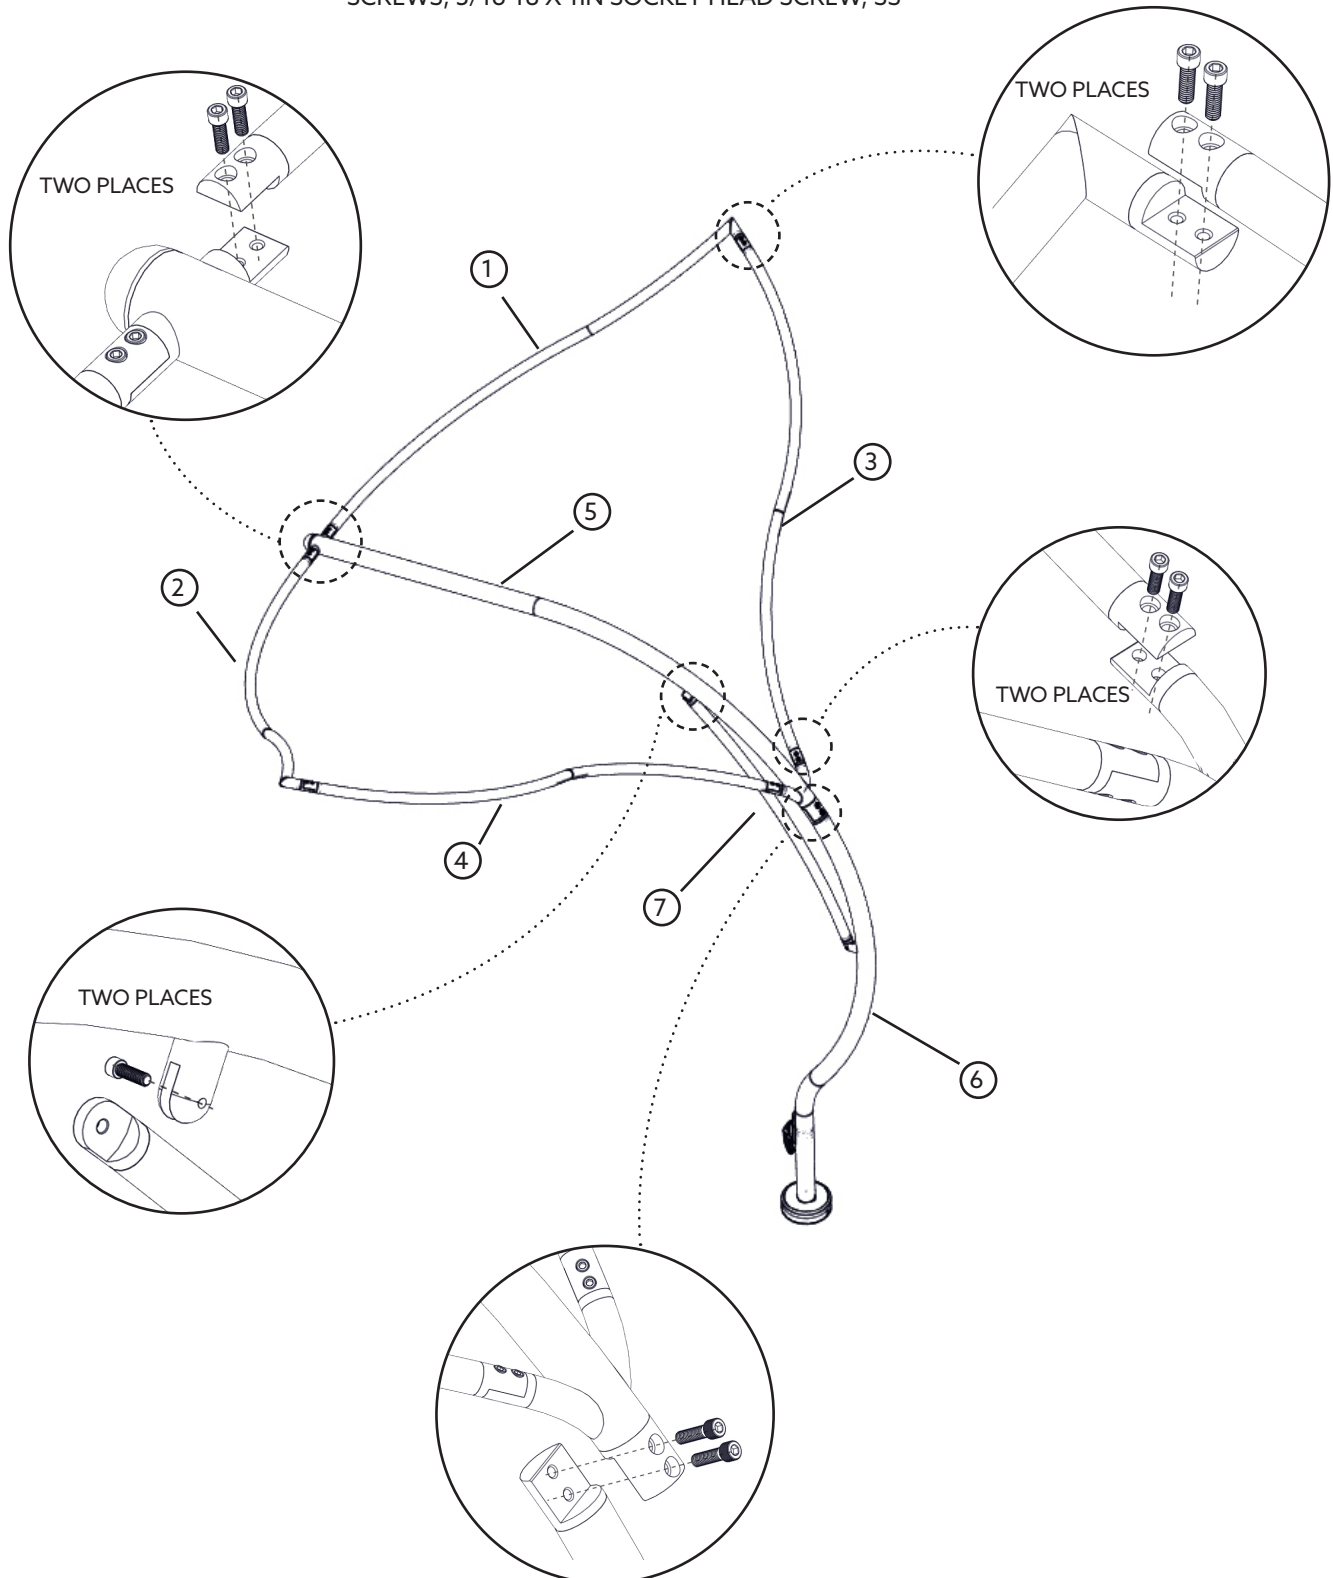


STEP 2

PULL PIN AND OPEN CAM HANDLE, MOUNT STINGRAY FRAME ON SECURITY STEM BASE.

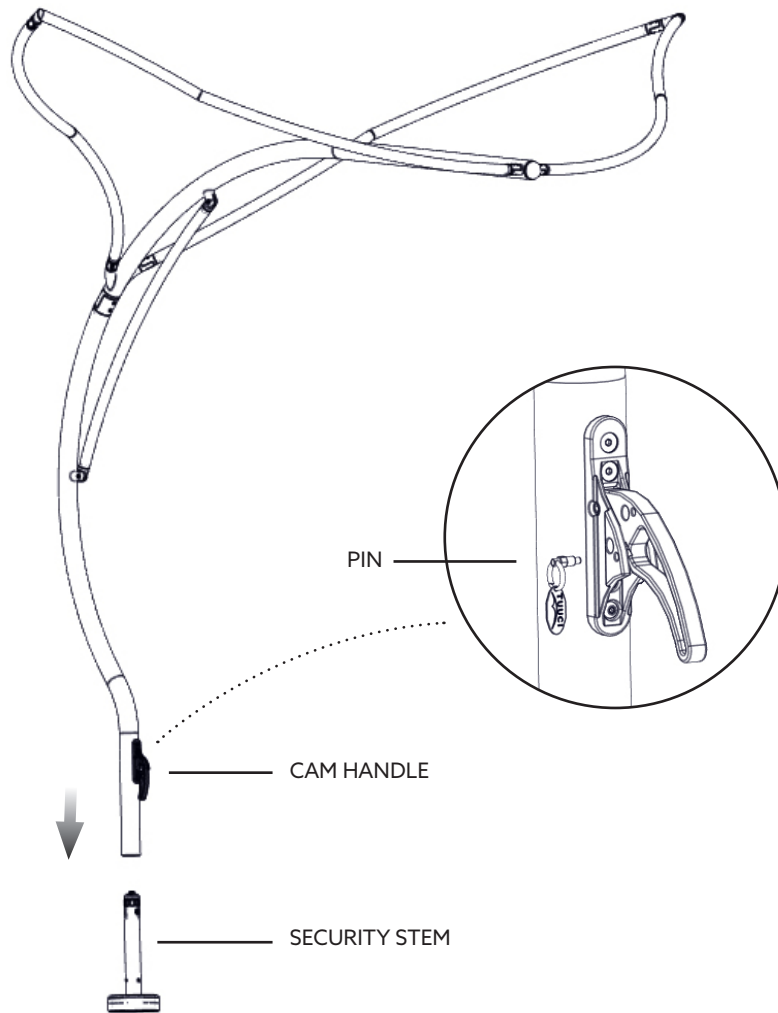

STEP 3


ONCE FRAME IS MOUNTED, LOCK CAM HANDLE.

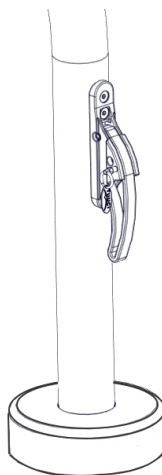

CANOPY INSTALLATION

STEP 1:

INSERT POCKETS ON BOTH SIDES OF FRAME AS SHOWN

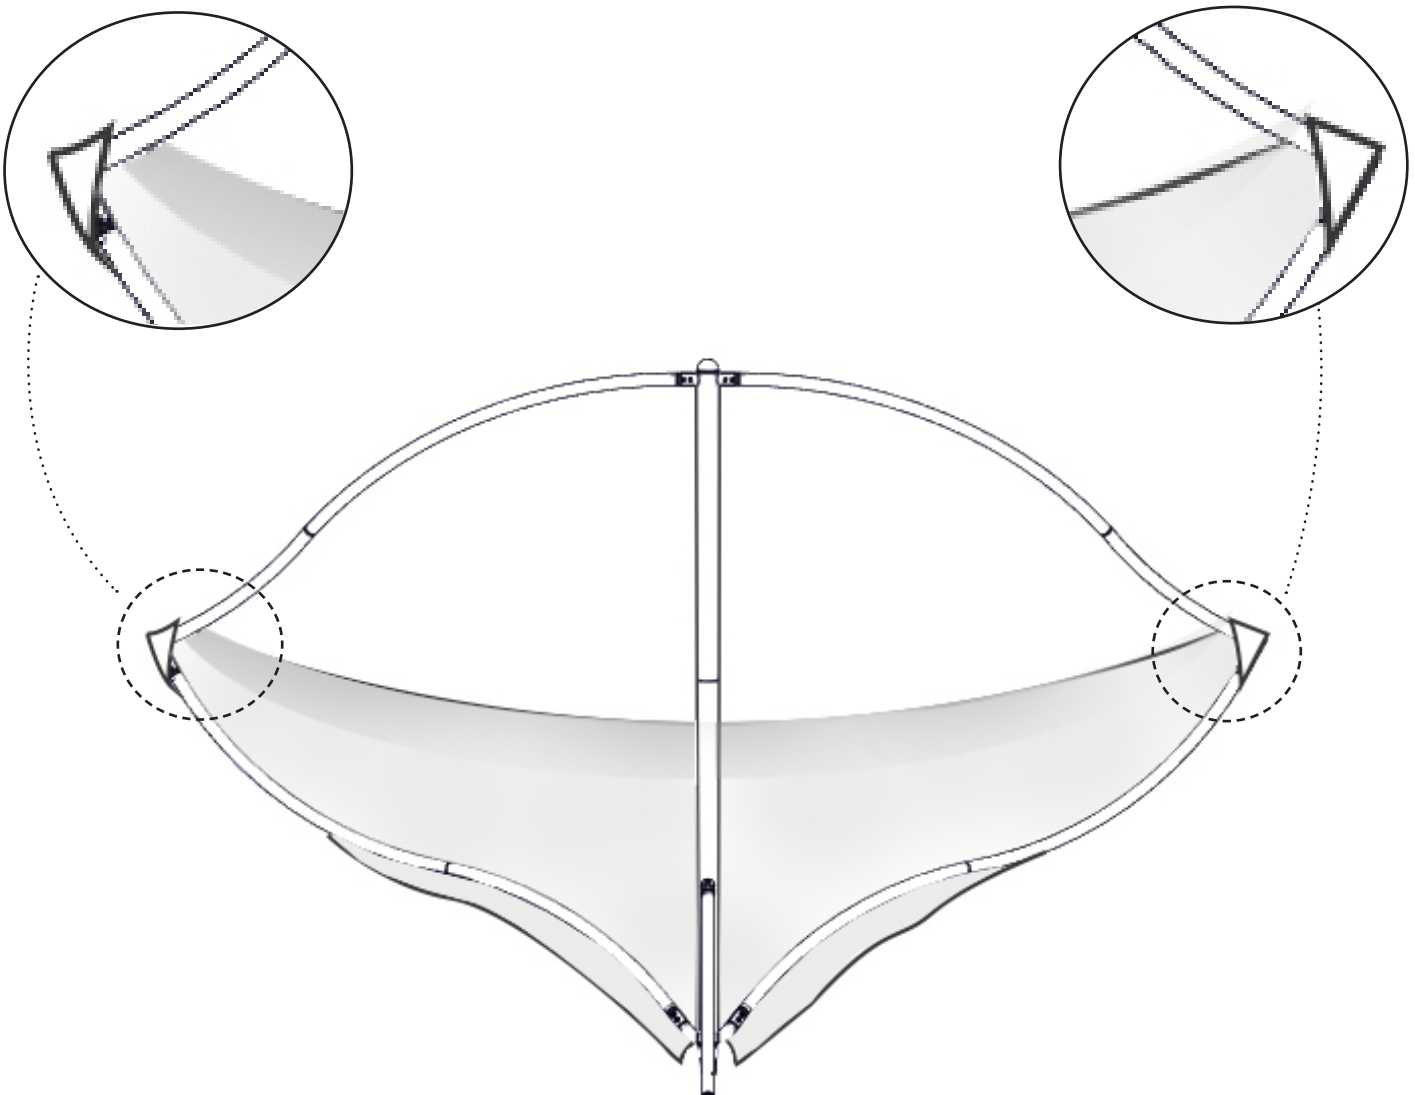

STEP 2:

WITH THE HELP OF SOMEONE PROPPING THE EDGES ZIPPER CANOPY BY SECTIONS ON BOTH SIDES.
SEE STEP 3 FOR DETAILS.



CANOPY INSTALLATION


STEP 3:
ZIP ALL 4 SIDES HALFWAY AND EVENLY.

IF NECESSARY USE THE ROPE PROVIDED TO PULL AND LEAD THE ZIPPERS HORIZONTALLY TO HELP CLOSE.
DO NOT USE EXTREME FORCE TO PULL THE ZIPPERS AND NEVER PULL THE ROPE DOWNWARD.

ONCE ALL 4 SIDES ARE ZIPPED HALFWAY GO BACK AND FULLY ZIP/CLOSE ALL FOUR SIDES.



ROPE

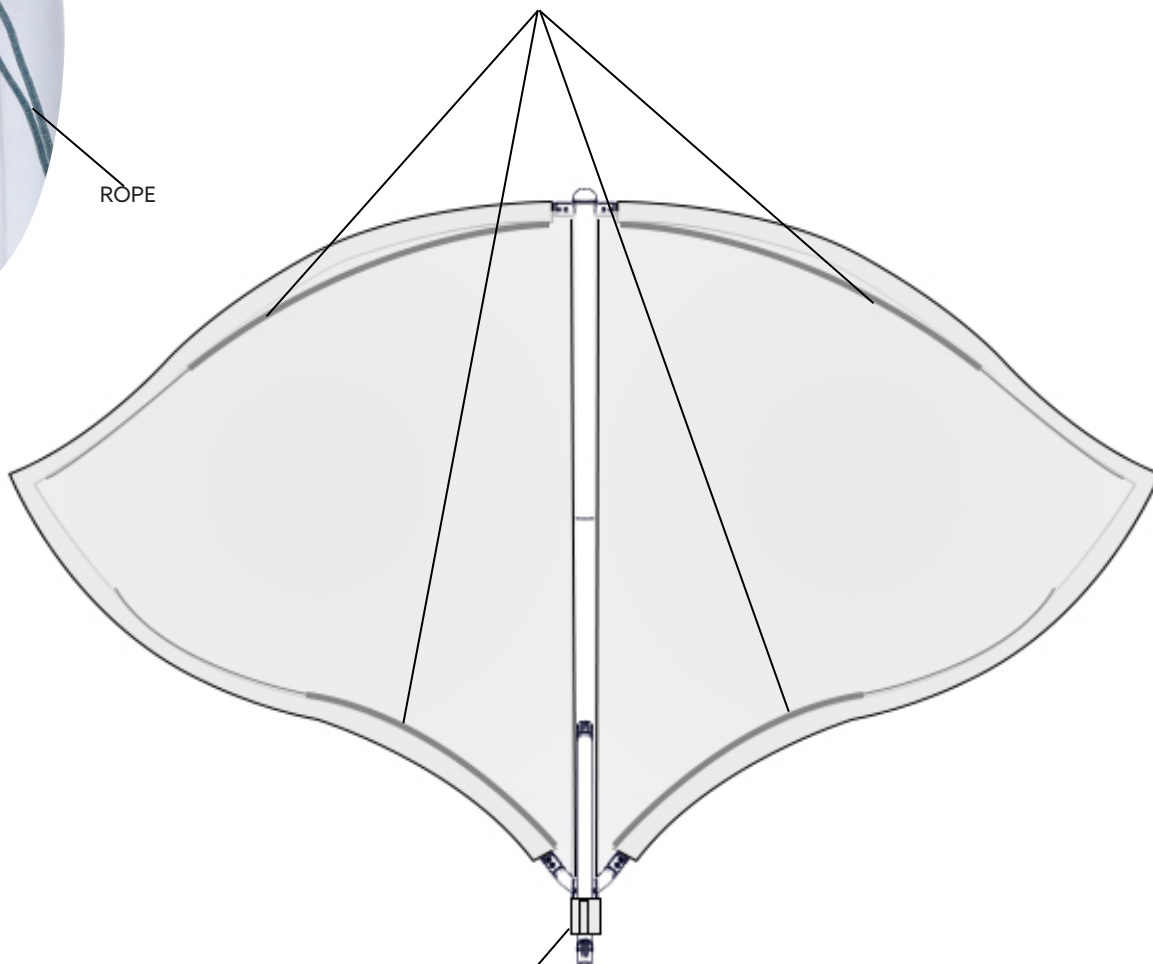

STEP 4:
SECURE BOTTOM WITH THE VELCRO STRAP

